
#50150 CHROME OUTRIGGER DISPLAY #50160 BLACK OUTRIGGER DISPLAY

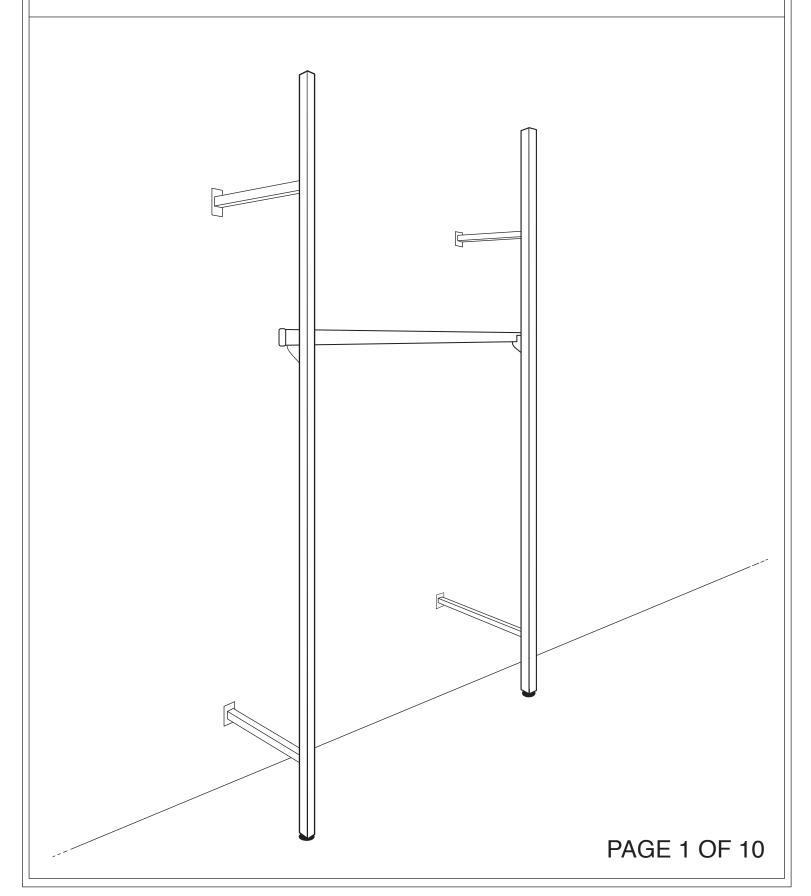

#50150 CHROME OUTRIGGER DISPLAY #50160 BLACK OUTRIGGER DISPLAY

*PLEASE NOTE: (2) OUTRIGGERS NEEDED FOR ONE SET 0 0 0 0 0 0
41/2" WALL SUPPORTS (2 EACH)
(2 EAOI)
(1 EACH)


PAGE 2 OF 10


#50150 CHROME OUTRIGGER DISPLAY #50160 BLACK OUTRIGGER DISPLAY


PARTS/TOOLS NOT INCLUDED:

- DIMENSIONAL HANGRAIL
- 3" BRACKET (2 NEEDED FOR EACH HANGRAIL)
- FLUSH END CAP FOR HANGRAIL (2 NEEDED FOR EACH HANGRAIL)
- 2" OR LONGER WOOD OR METAL SCREWS DEPENDS ON WHETHER YOU HAVE WOOD OR METAL STUDS (8 NEEDED FOR SET-UP)
- CORDLESS DRILL WITH PHILLIPS BIT
- LEVEL
- STUD FINDER
- TAPE MEASURE

4' DIMENSIONAL HANGRAIL (50402)

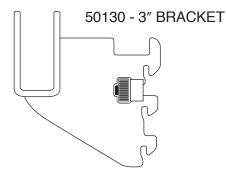

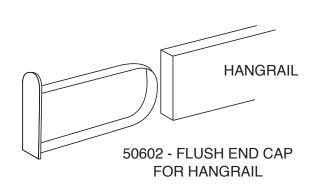



2" OR LONGER WOOD/METAL SCREW (8 EACH)


PAGE 3 OF 10

#50150 CHROME OUTRIGGER DISPLAY #50160 BLACK OUTRIGGER DISPLAY

STEP 1. PLACE BOTH VERTICAL POLES ON A FLAT SURFACE. (JUST FOR A REFERENCE) GO 7 SLOTS DOWN FROM THE TOP (FLAT END) AND INSERT THE WALL SUPPORT (ADJUSTER FACING DOWN) IN THE SLOTS AND SLIDE IN UNTIL SECURE.

USING YOUR HAND, TIGHTEN NUT UNTIL SECURE.

REPEAT FOR THE OTHER VERTICAL POLE.

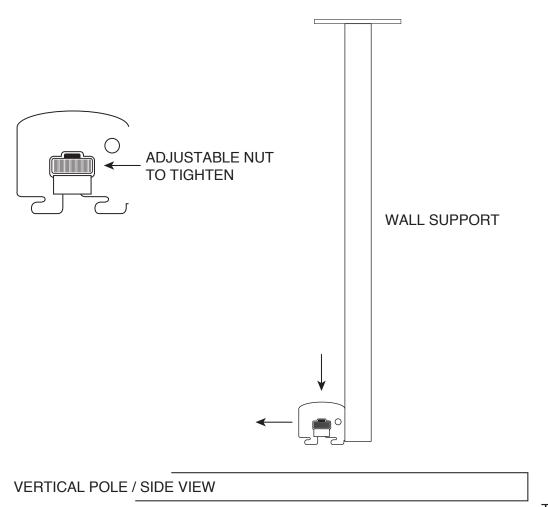

TOP


PAGE 4 OF 10

#50150 CHROME OUTRIGGER DISPLAY #50160 BLACK OUTRIGGER DISPLAY

STEP 2. GO 7 SLOTS UP FROM THE BOTTOM (WITH ADJUSTABLE GLIDES) AND INSERT THE WALL SUPPORT (ADJUSTER FACING DOWN) IN THE SLOTS AND SLIDE IN UNTIL SECURE.

USING YOUR HAND, TIGHTEN NUT UNTIL SECURE.

REPEAT FOR THE OTHER VERTICAL POLE (OUTRIGGER).

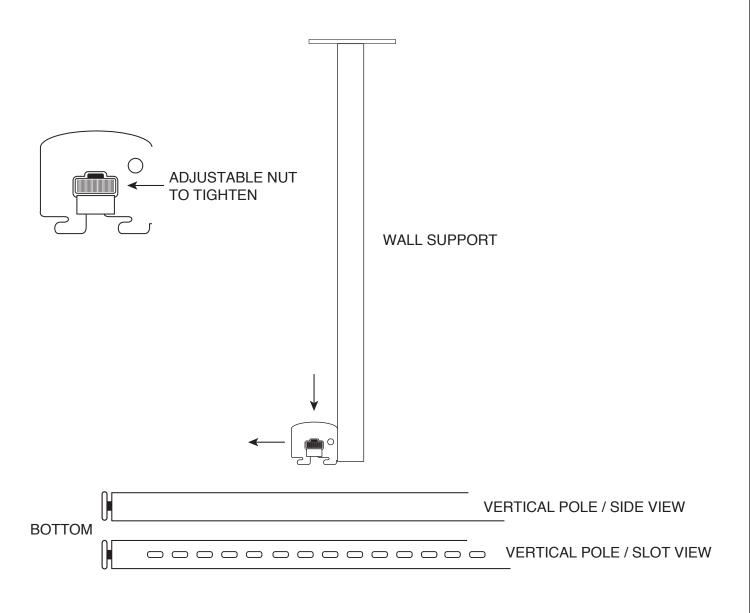


PAGE 5 OF 10

#50150 CHROME OUTRIGGER DISPLAY #50160 BLACK OUTRIGGER DISPLAY

*2 PEOPLE ARE RECOMMENDED FOR STEPS 3 THROUGH 5

STEP 3. LOCATE SPACE ON WALL WHERE YOU WANT YOUR OUTRIGGER TO BE MOUNTED.

HOLD THE VERTICAL POLE (RESTING ON THE FLOOR) WITH THE ATTACHED WALL SUPPORTS UP AGAINST THE WALL WITH THE (2) HOLES ON THE WALL SUPPORT MATCHING UP WITH YOUR PENCIL MARK (SEE INSET)

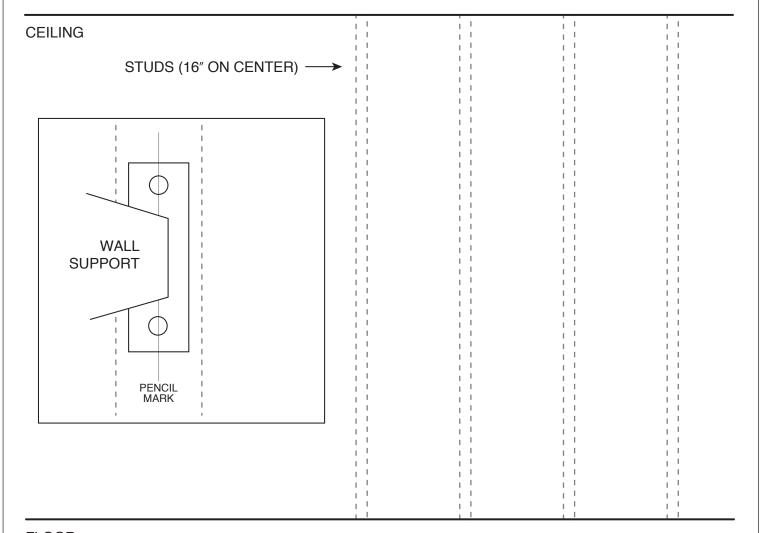

FLOOR


PAGE 6 OF 10


#50150 CHROME OUTRIGGER DISPLAY #50160 BLACK OUTRIGGER DISPLAY

STEP 4. WHILE THE OTHER PERSON HOLDS THE OUTRIGGER, PLACE A LEVEL (NOT INCLUDED) AGAINST THE SIDE OF THE POLE, MOVE THE POLE EITHER LEFT OR RIGHT UNTIL IT IS PLUMB (STRAIGHT UP & DOWN - SEE FIG 1).

MAKE A MARK ON THE WALL FOR THE OTHER SET OF WALL SUPPORTS (SEE FIG. 2).

FIG. 1

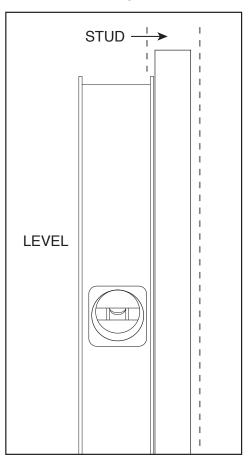

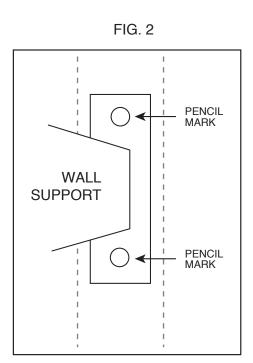


ASSEMBLY INSTRUCTIONS MANUAL #50150 CHROME OUTRIGGER DISPLAY #50160 BLACK OUTRIGGER DISPLAY

STEP 5. WHILE THE OTHER PERSON HOLDS THE OUTRIGGER, USE A CORDLESS DRILL (NOT INCLUDED) AND (4) 2" OR LONGER WOOD/METAL SCREWS (NOT INCLUDED) TO SECURE THE OUTRIGGER TO THE STUD BEHIND THE WALL.


FROM THE CENTER OF THE WALL SUPPORTS THAT YOU JUST MOUNTED, MEASURE OVER 48"(LEFT OR RIGHT) TO MAKE YOUR MARKS FOR THE OTHER OUTRIGGER.

REPEAT STEPS 3 THROUGH 5 FOR THE OTHER OUTRIGGER.

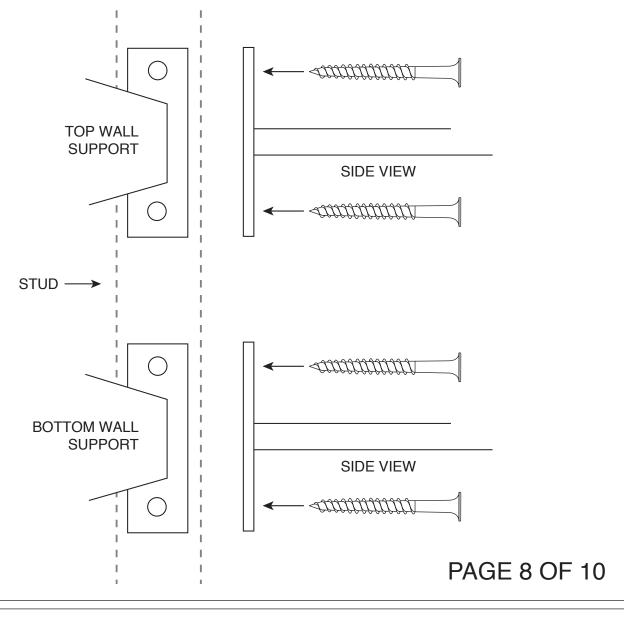

ASSEMBLY INSTRUCTIONS MANUAL #50150 CHROME OUTRIGGER DISPLAY #50160 BLACK OUTRIGGER DISPLAY

STEP 6. DEPENDING ON HOW MANY HANGRAILS YOU ARE USING AND WHAT PRODUCTS YOU WILL BE DISPLAYING, THE PLACEMENT WILL VARY AS TO WHERE YOU INSTALL THE (2) BRACKETS (NOT INCLUDED) FOR THE HANGRAIL (NOT INCLUDED).

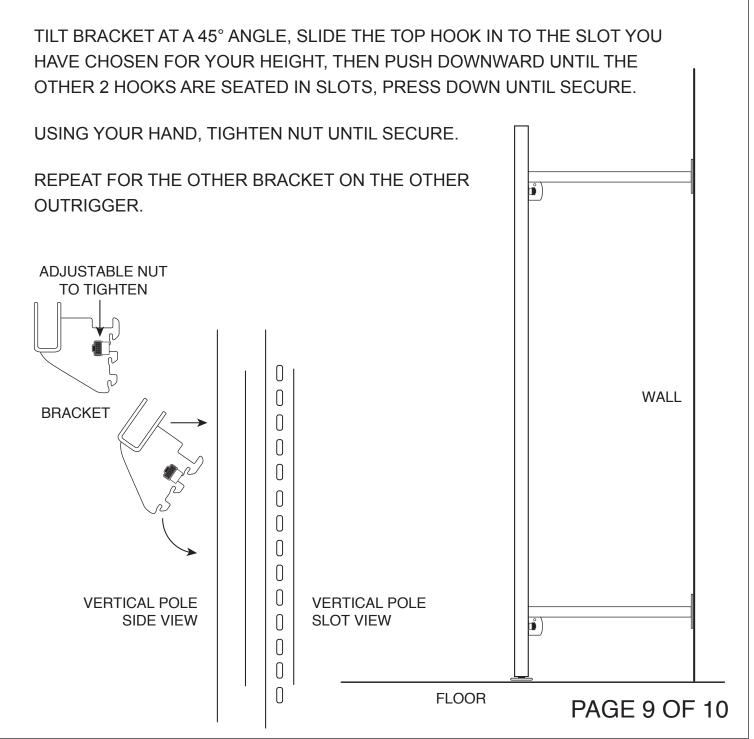

#50150 CHROME OUTRIGGER DISPLAY #50160 BLACK OUTRIGGER DISPLAY

STEP 7. LOWER THE HANGRAIL IN TO THE SLOTS OF THE BRACKETS UNTIL SECURE.

