


PAGE 1 OF 5

### PARTS IN CARTON:

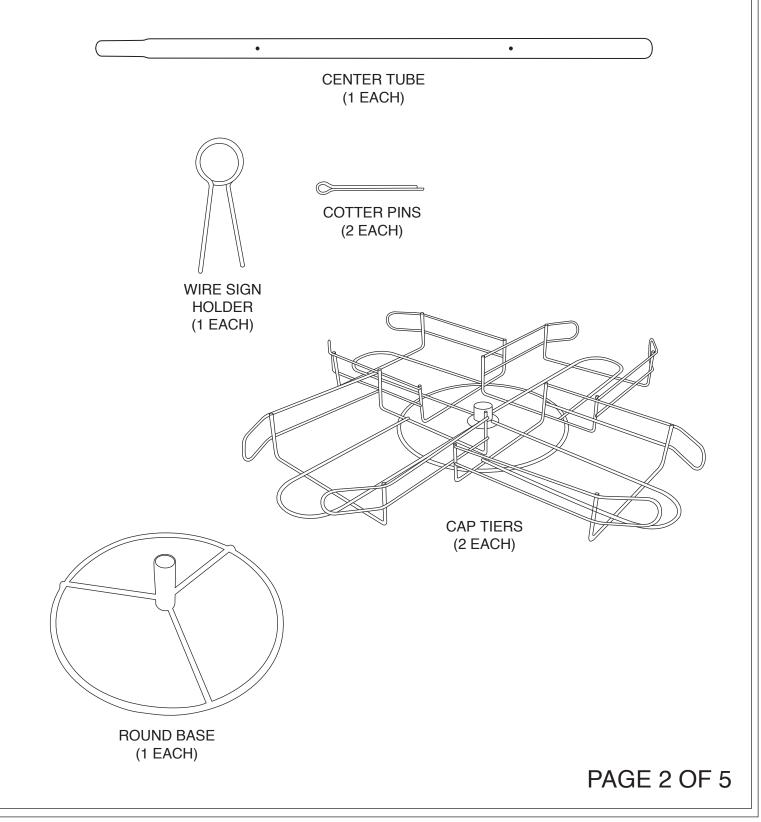


### #60185 COUNTERTOP CAP RACK - 2 TIER


### STEP 1:

ATTACH THE CENTER TUBE TO THE BASE BY INSERT-ING THE TAPERED END OF THE TUBE INTO THE BASE. AFTER THE TUBE IS INSERTED, TWIST THE TUBE CLOCKWISE UNTIL IT LOCKS INTO THE BASE.

### STEP 2:

LOCATE THE BOTTOM HOLE IN THE CENTER TUBE (LOCATED NEAR THE BASE), INSERT THE COTTER PIN INTO THE HOLE. AFTER THE COTTER PIN IS COMPLETELY INSERTED, BEND THE LONGER END OF THE COTTER PIN AWAY FROM THE SHORTER END. THIS WILL SECURE THE COTTER PIN INTO THE HOLE SO IT DOESN'T FALL OUT (SEE DIAGRAM BELOW). PLIERS ARE RECOMMENDED TO BEND THE WIRE.

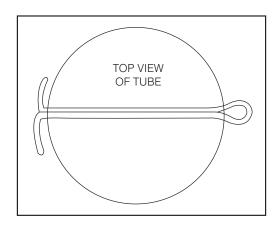

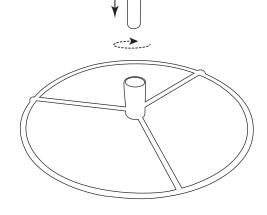


CENTER TUBE

COTTFR PIN

**STEP 3.** PLACE THE 1ST CAP TIER ONTO THE TUBE AND LET IT REST ON THE COTTER PIN.


LOCATE THE NEXT HOLE ABOVE THE 1ST CAP TIER, REPEAT STEPS 2 & 3 FOR THE 2ND CAP TIER.

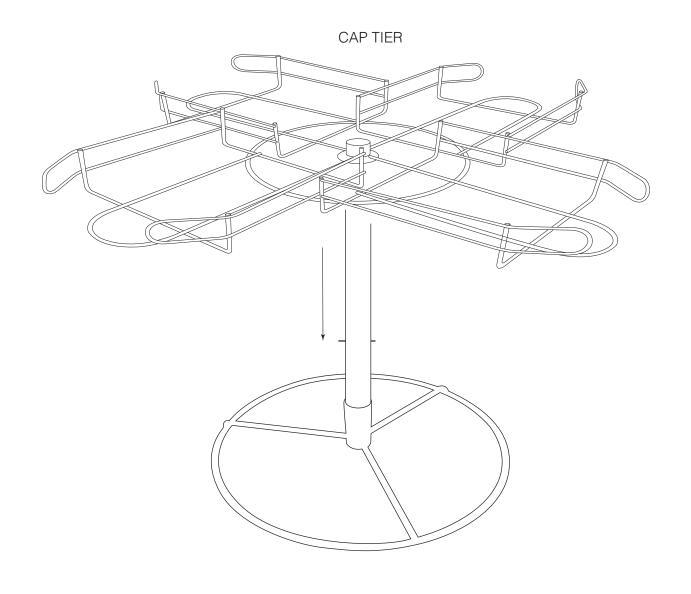

PAGE 4 OF 5

STEP 4. ATTACH THE WIRE SIGN HOLDER TO THE TOP OF THE RACK.

THIS COMPLETES THE ASSEMBLY.

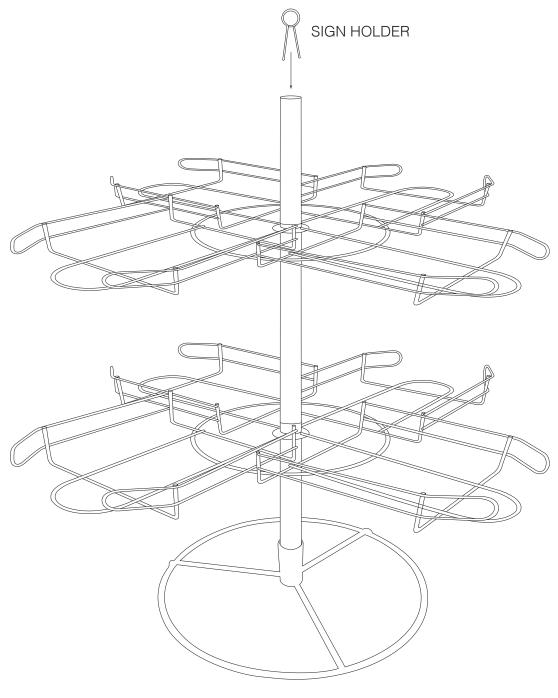

PAGE 5 OF 5