

#60622 (COBBLESTONE) TWIN STEM SIGN HOLDER

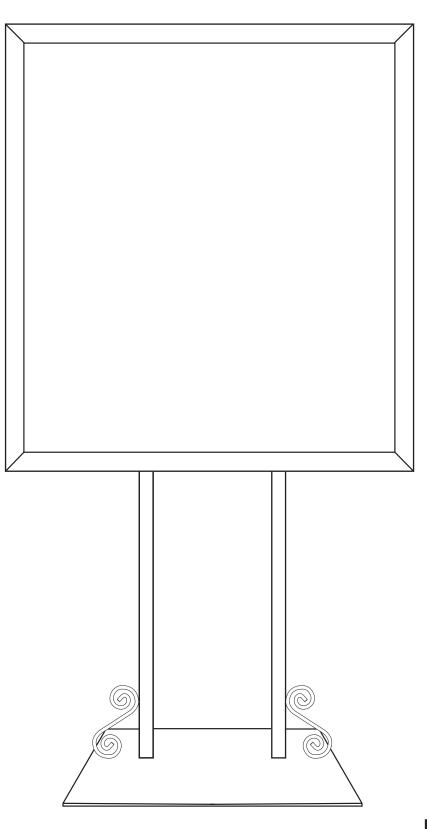

PAGE 1 OF 4

#60622 (COBBLESTONE) TWIN STEM SIGN HOLDER

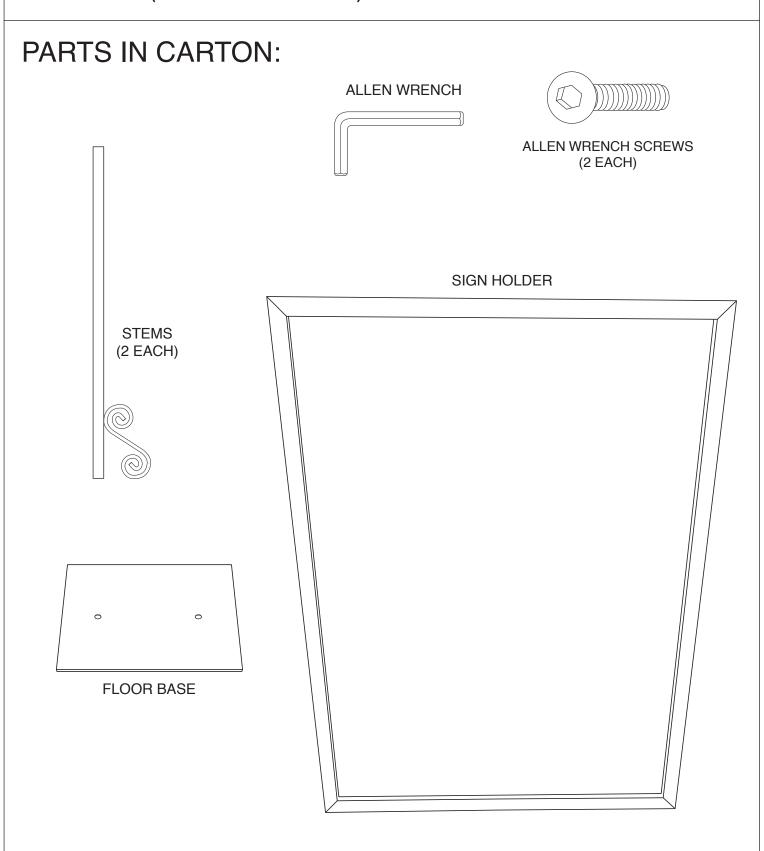


PAGE 2 OF 4

#60622 (COBBLESTONE) TWIN STEM SIGN HOLDER

### STEP 1

THREAD STEM ONTO SIGN HOLDER (CLOCKWISE) UNTIL TIGHT. REPEAT FOR OTHER SIDE.

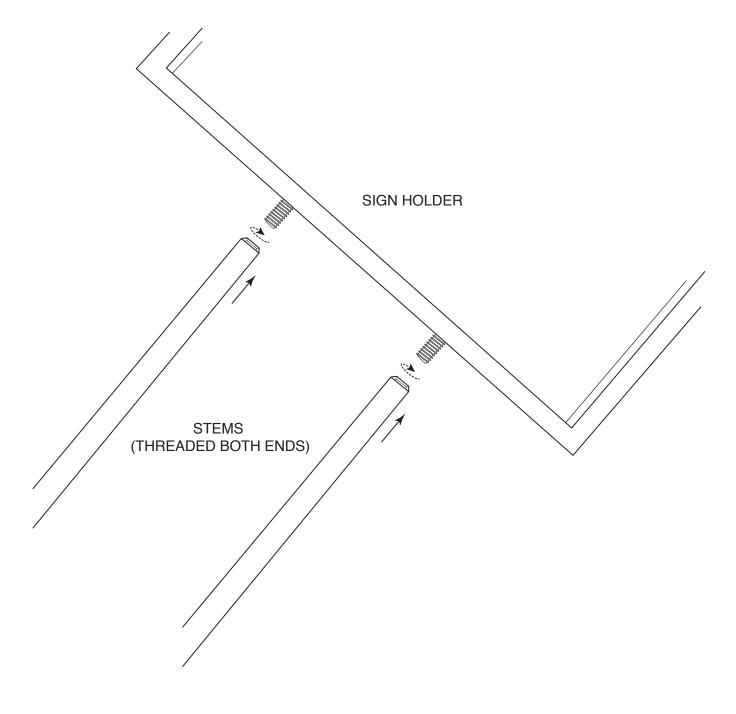


PAGE 3 OF 4

#60622 (COBBLESTONE) TWIN STEM SIGN HOLDER

#### STEP 2

SLIDE ONE ALLEN WRENCH SCREW THROUGH ONE HOLE OF THE FLOOR BASE. ALIGN TO ONE STEM, SCREW INTO STEM UNTIL IT IS SECURE. (TIGHTEN WITH ALLEN WRENCH PROVIDED). REPEAT FOR OTHER SIDE.

THIS COMPLETES THE ASSEMBLY.

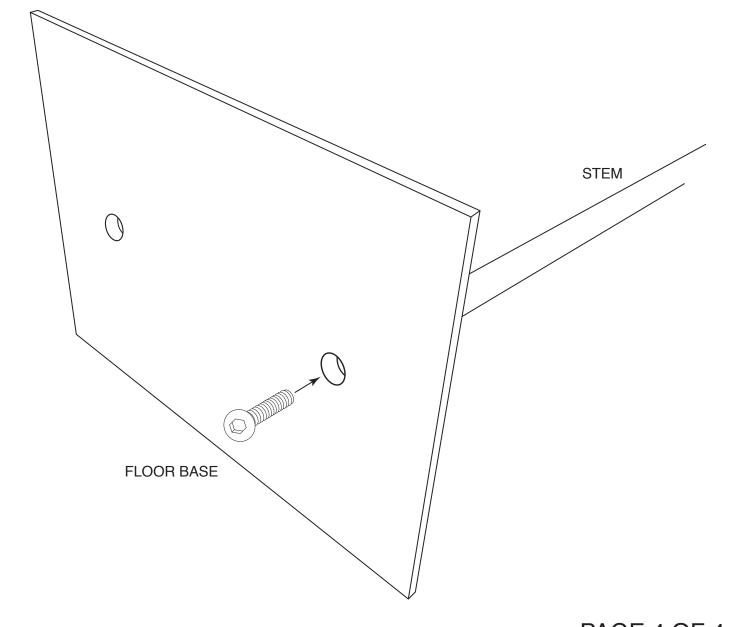

PAGE 4 OF 4