


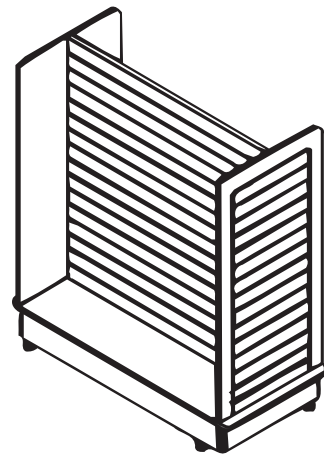


# SLATWALL GONDOLA WITH OPTIONAL BASE


Join top center panel to bottom center panel with 2 spline pieces glued as shown.

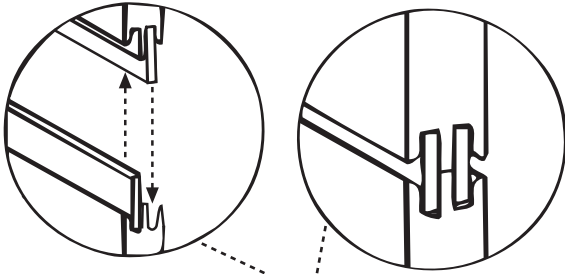

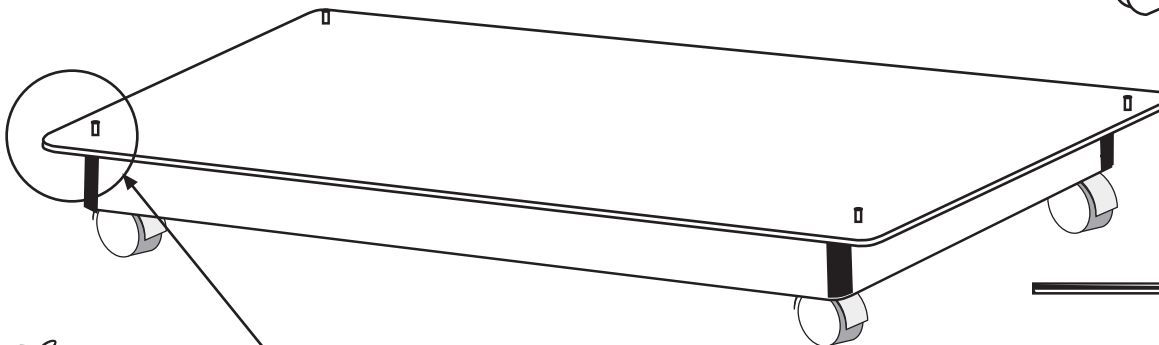

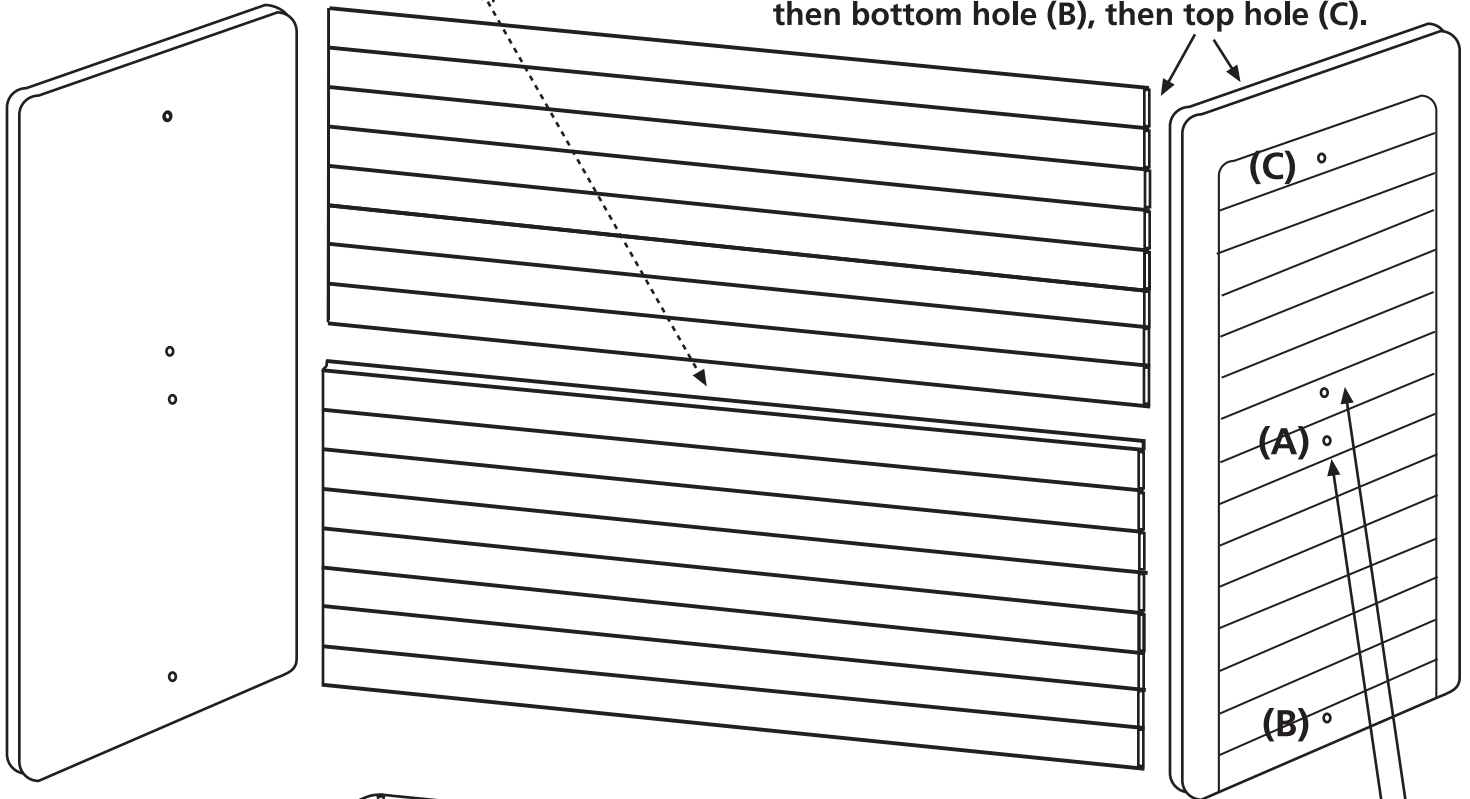

Affix wing panels onto center panels with 2" fasteners beginning with middle holes (A), then bottom hole (B), then top hole (C).

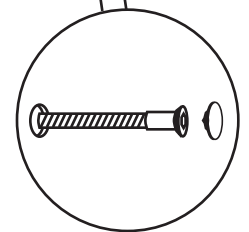

Fit dowel pins into holes on base. Align with holes in bottom of wing panels.



-  (1) Allen Wrench
-  (8) 2" Fasteners
-  (8) Button Caps
-  (4) Dowel Pins

