


PAGE 1 OF 6

PARTS IN CARTON:

TRIANGLE BASE 1 EACH

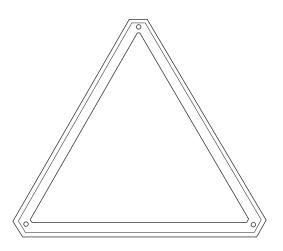


ROLLING CASTERS 3 EACH



GRID CONNECTORS
9 EACH




2' x 6' GRID PANELS 3 EACH

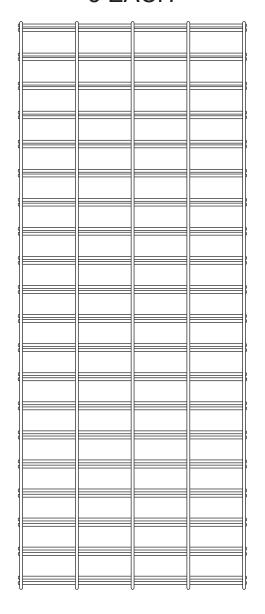


PAGE 2 OF 6

STEP 1

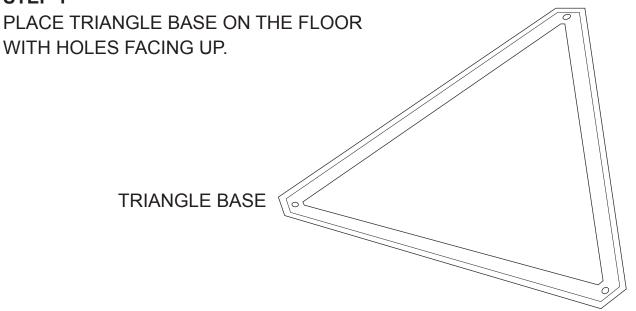

STEP 2


INSERT ROLLING CASTERS INTO THREADED HOLES USING A 1/2 INCH OPEN END WRENCH OR CRESENT WRENCH. MAKE SURE ALL 3 CASTERS ARE ATTACHED TIGHTLY.

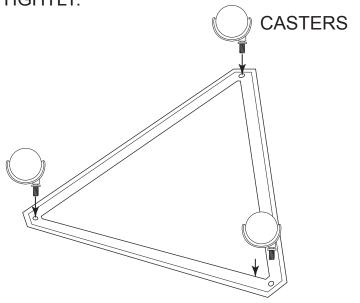

PAGE 3 OF 6


STEP 3

PLACE TRIANGLE BASE ON THE FLOOR SO CASTERS ARE RESTING ON THE FLOOR.

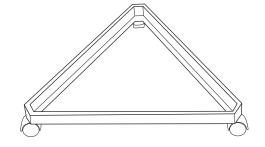

STEP 4


SET GRID PANELS ONE AT A TIME INTO THE RECESSED PART OF THE TRIANGLE BASE (THIS MAY TAKE 2 PEOPLE). ONE TO HOLD THE FIRST GRID PANEL IN PLACE WHILE THE 2ND PANEL IS PLACED ON THE OPPOSITE SIDE).

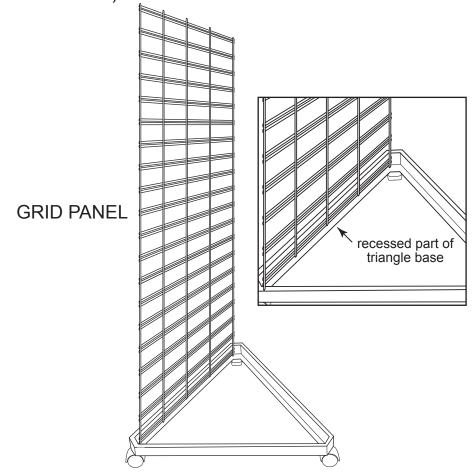

PAGE 4 OF 6

STEP 5

ONCE THE 2 GRID PANELS ARE SET, ATTACH THEM USING (3) GRID CONNECTORS. SECURE GRID CONNECTORS ON THE 2ND, 9TH AND 16TH GRID SECTIONS USING A PHILLIPS SCREWDRIVER (GRID PANELS ARE MADE UP OF SMALLER GRIDS WITHIN THE PANELS).

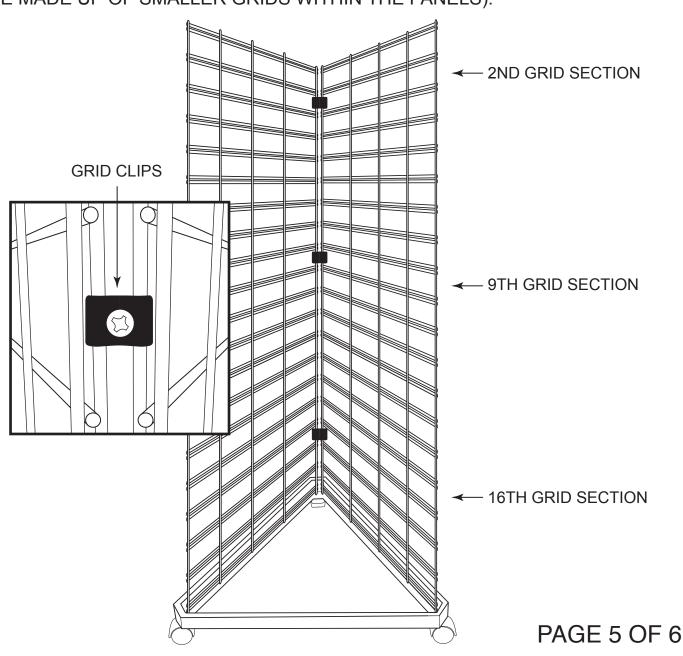

STEP 6

ONCE YOU HAVE THE FIRST (2) GRID PANELS SET AND ATTACHED, SET THE 3RD AND FINAL PANEL USING (3) GRID CONNECTORS. ALL TOGETHER (9) GRID CONNECTORS WILL BE USED TO SET ALL 3 PANELS TOGETHER. AGAIN, SECURE GRID CONNECTORS ON THE 2ND, 9TH AND 16TH GRID SECTIONS USING A PHILLIPS SCREWDRIVER. THIS WILL COMPLETE THE ASSEMBLY.

