



FRONT OF REGISTER STAND





STORE SUPPLY WAREHOUSE, LLC PHONE : 1-800-823-8887 FAX : 1-800-823-0004

REAR OF REGISTER STAND

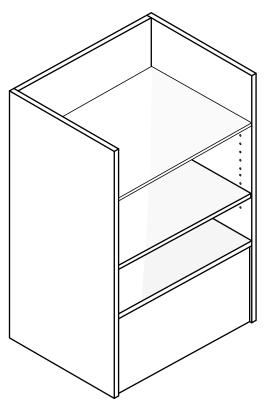

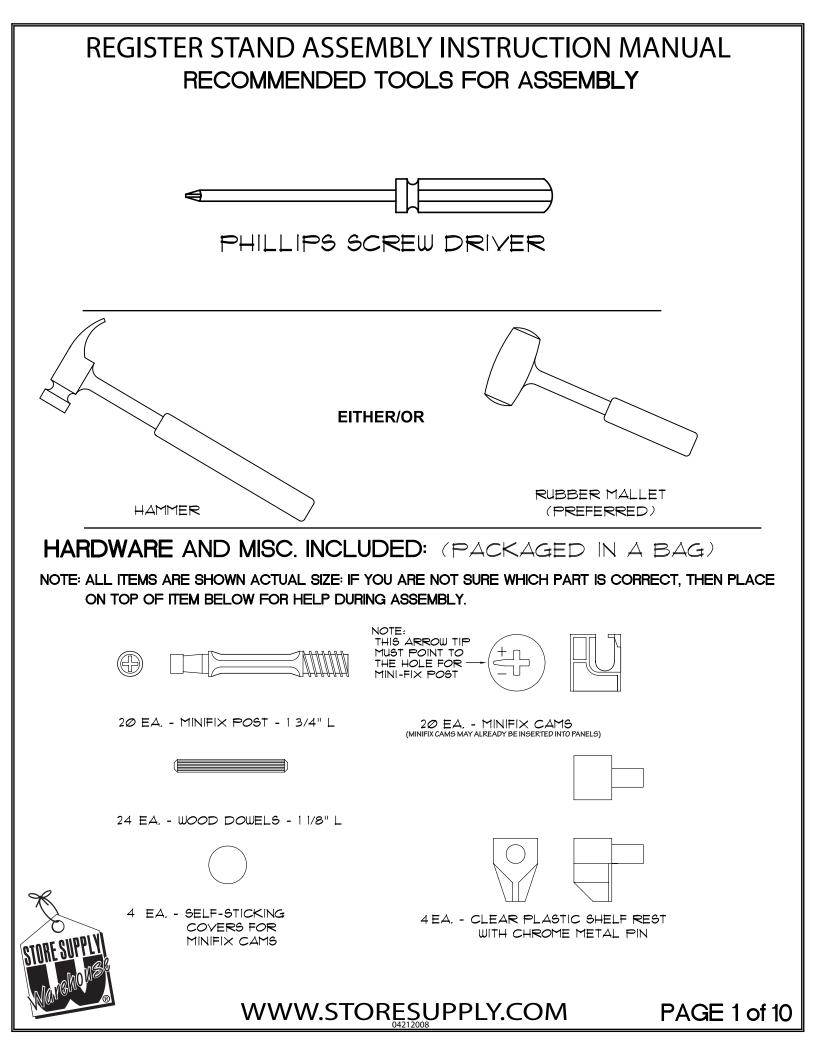


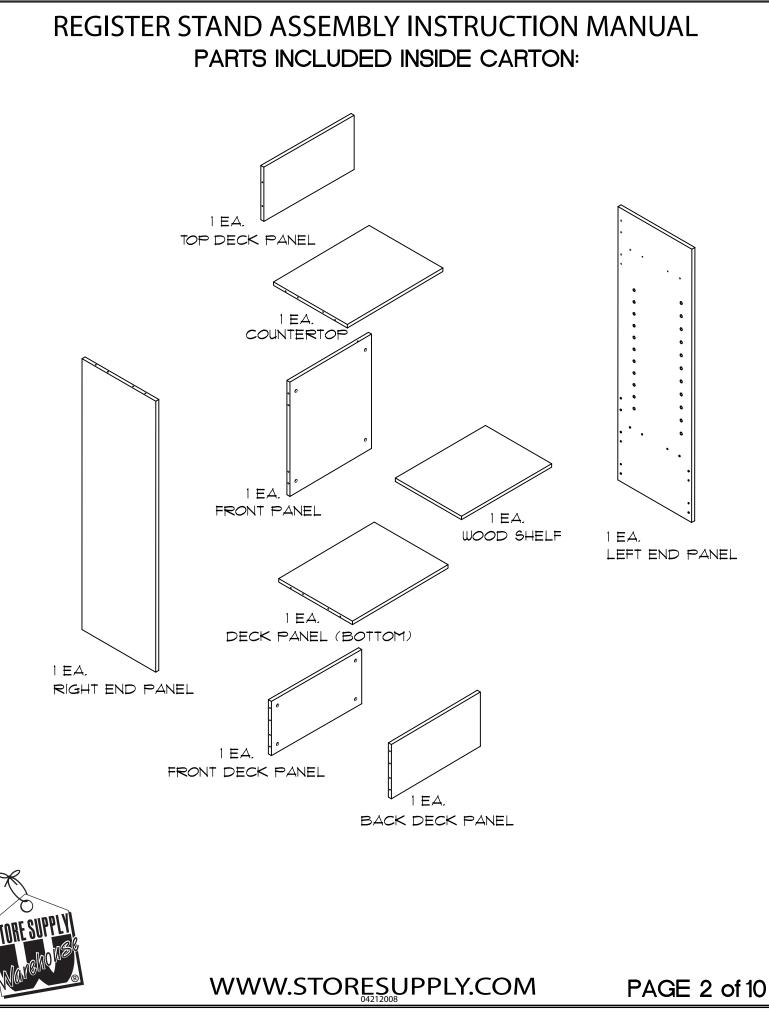

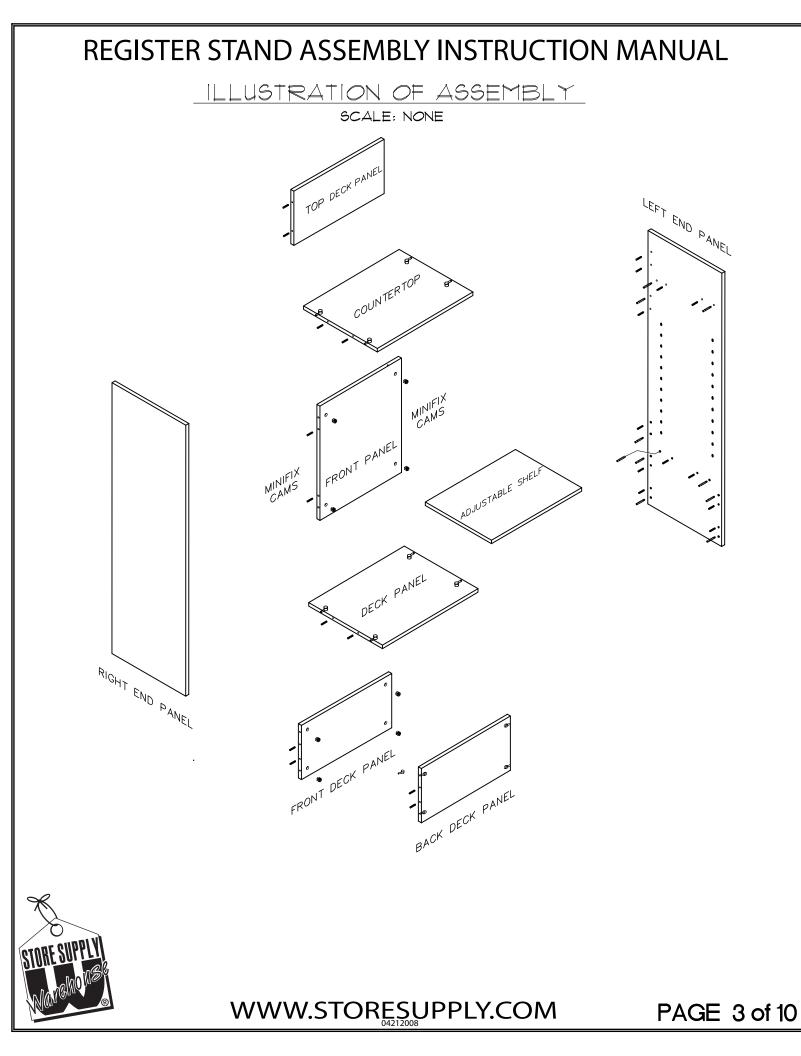


REGISTER STAND ASSEMBLY INSTRUCTION MANUAL ASSEMBLY TIME APPROXIMATELY 1/2 HOUR WITH A HELPER STEP 1:

PLACE THE RIGHT AND LEFT SIDE PANELS ON A FLAT SURFACE WITH THE INSIDE FACE UP AND SCREW ONE OF THE MINIFIX POSTS IN EACH OF THE TEN (10) HOLES INDICATED IN BOTH THE LEFT AND RIGHT SIDE PANELS. (SEE DIAGRAM "1A")

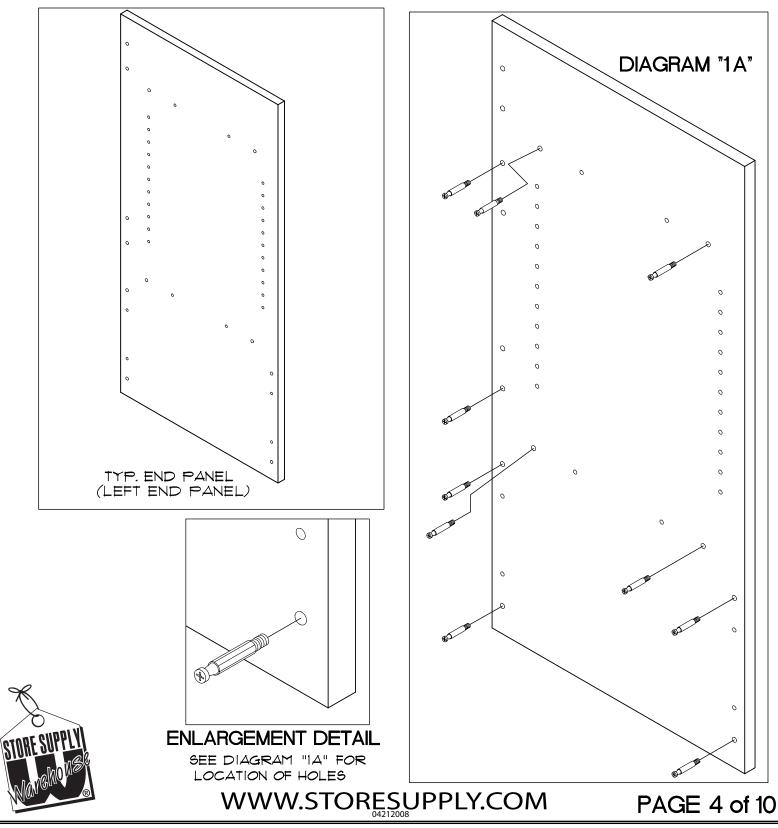


STEP 2 :

PLACE ONE WOODEN DOWEL INTO EACH OF THE TWELVE(12) HOLES INDICATED IN BOTH THE LEFT AND RIGHT END PANELS. GENTLY TAP EACH WOODEN DOWEL WITH A HAMMER OR RUBBER MALLET UNTIL SECURED **(SEE DIAGRAM "2A")**.

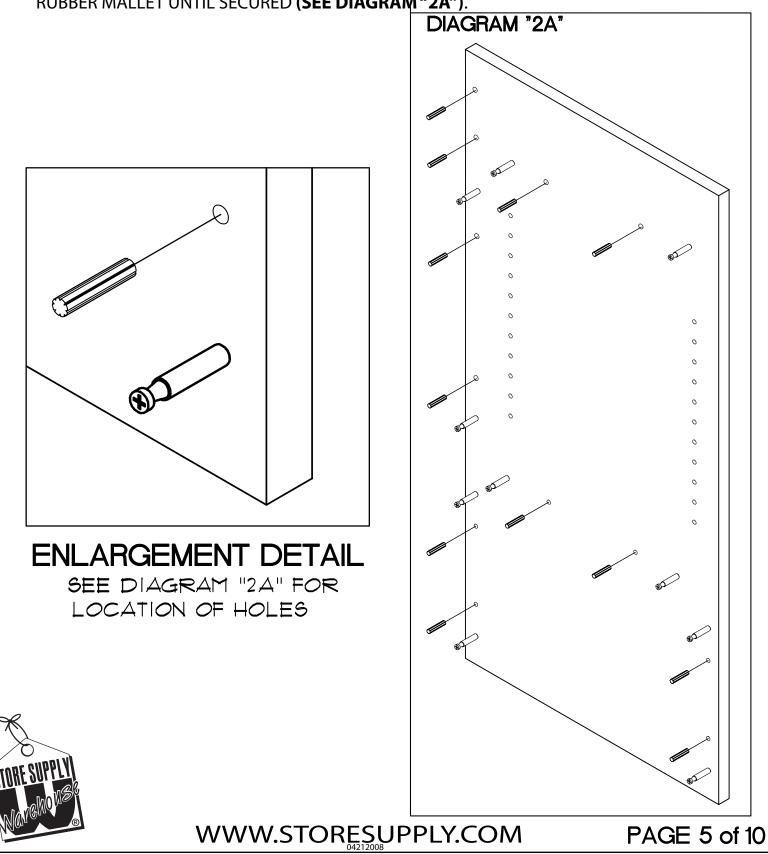


STEP 3:

LINE UP THE TWO HOLES ON THE LEFT SIDE OF THE TOP DECK PANEL WITH THE TWO WOODEN DOWELS INDICATED **(DIAGRAM "3A")**. GENTLY TAP THE PANEL INTO PLACE WITH A HAMMER OR RUBBER MALLET. PLACE ONE 3/4" MINIFIX CAM INTO EACH OF THE FOUR HOLES IN THE BOTTOM OF THE COUNTERTOP PANEL WITH THE ARROWS ON THE MINIFIX CAMS FACING OUTWARD. LINE UP THE FOUR HOLES ON THE LEFT SIDE OF THE COUNTERTOP PANEL WITH THE WOODEN DOWELS AND MINIFIX POSTS INDICATED **(DIAGRAM "3A")**. TAP THE PANEL INTO PLACE AND TIGHTEN THE MINIFIX CAMS CLOCKWISE UNITL LOCKED INTO PLACE **(DIAGRAM "3C")**.

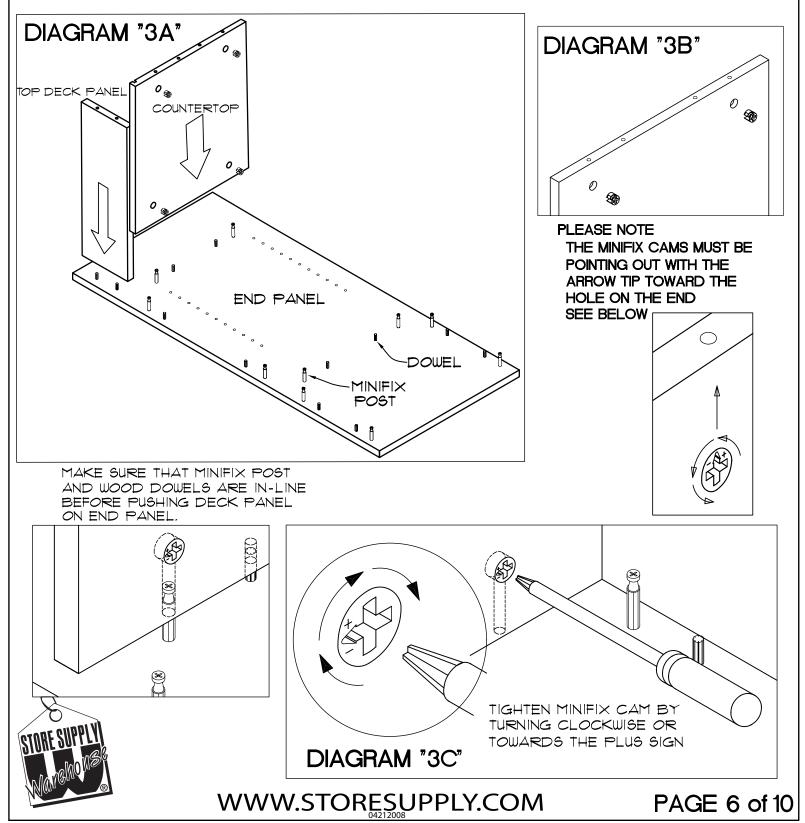


STEP 4:

PLACE ONE 3/4" MINIFIX CAM INTO EACH OF THE FOUR HOLES ON THE INSIDE OF THE FRONT PANEL AND THE BOTTOM OF THE BOTTOM DECK PANEL. LINE UP THE FOUR HOLES ON THE LEFT SIDE OF THE FRONT PANEL WITH THE TWO WOODEN DOWELS AND TWO MINIFIX POSTS INDICATED IN **DIAGRAM "4A"**. TAP THE PANEL INTO PLACE AND TIGHTEN MINIFIX CAMS WITH A CLOCKWISE TURN TO SECURE. REPEAT FOR THE BOTTOM DECK PANEL MAKING SURE THE MINIFIX CAMS FACE DOWNWARD AS INDICATED IN **DIAGRAM "4A"**.

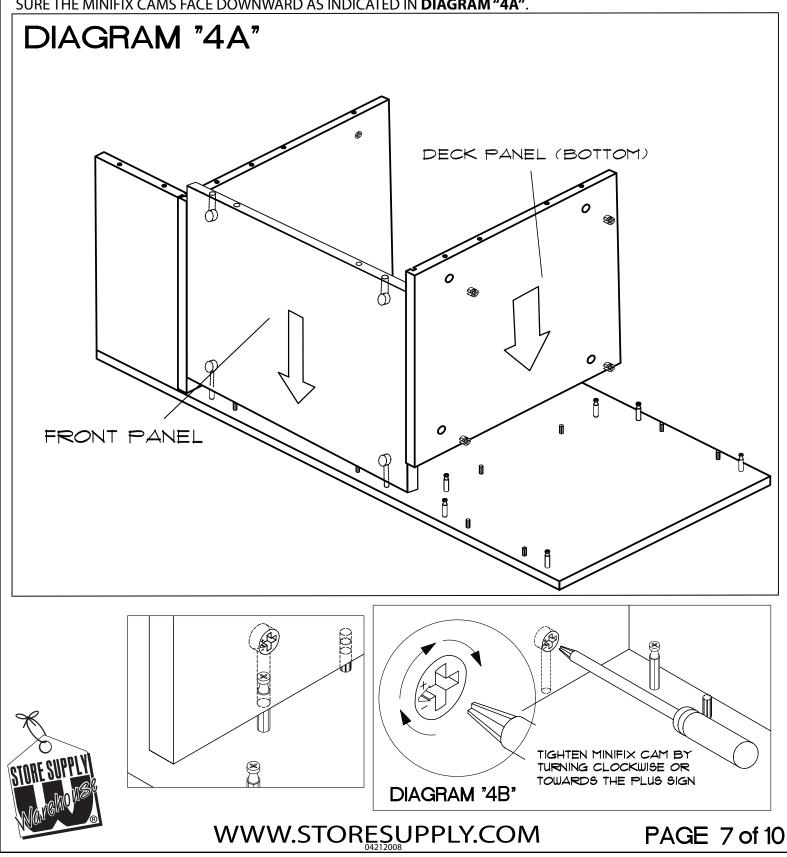


STEP 5:

PLACE ONE 3/4" MINIFIX CAM INTO EACH OF THE FOUR HOLES ON THE INSIDE OF THE FRONT DECK PANEL AND THE INSIDE OF THE BACK DECK PANEL. LINE UP THE FOUR HOLES ON THE LEFT SIDE OF THE FRONT DECK PANEL WITH THE TWO WOODEN DOWELS AND TWO MINIFIX POSTS INDICATED IN **DIAGRAM "5A"**. TAP THE PANEL INTO PLACE AND TIGHTEN MINIFIX CAMS WITH A CLOCKWISE TURN TO SECURE. REPEAT FOR THE BACK DECK PANEL MAKING SURE THE MINIFIX CAMS FACE DOWNWARD AS INDICATED IN **DIAGRAM "5B"**.

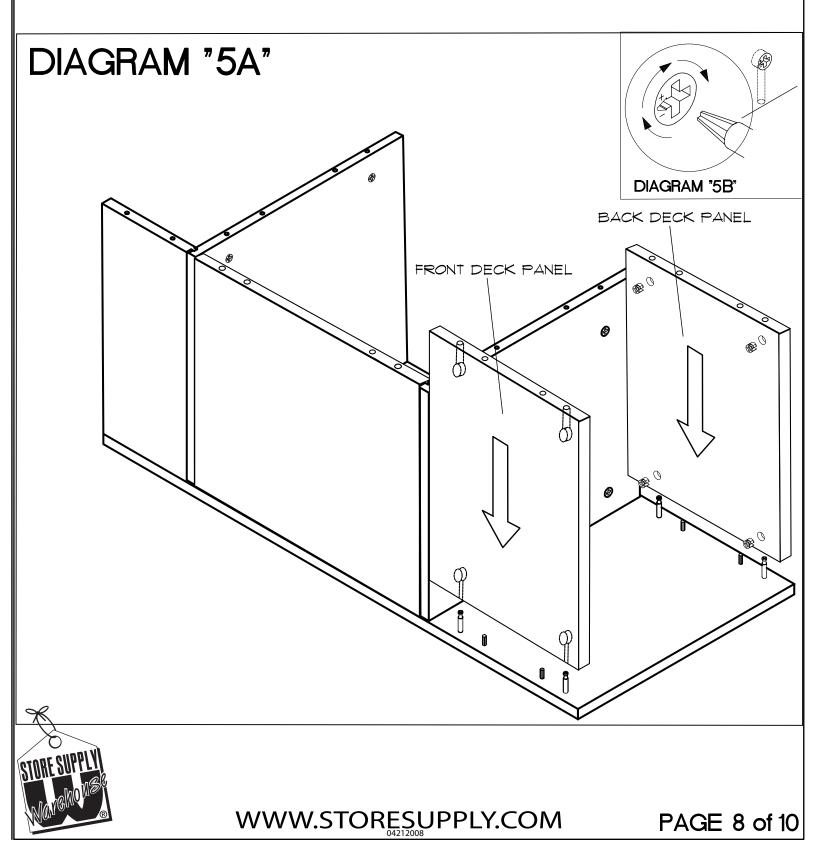

STEP 6:

LOWER THE RIGHT END PANEL WITH ALL MINFIX POSTS AND WOODEN DOWELS INSERTED(**SEE STEP 1**) ON TO THE ASSEMBLED PANELS MAKING SURE TO LINE UP ALL POSTS AND DOWELS WITH THE HOLES INDICATED IN **DIAGRAM "6B"**. GENTLY TAP THE PANEL INTO PLACE. TIGHTEN THE TEN REMAINING 3/4" MINFIX CAMS WITH A CLOCKWISE TURN UNTIL THE RIGHT SIDE PANEL IS SECURED.

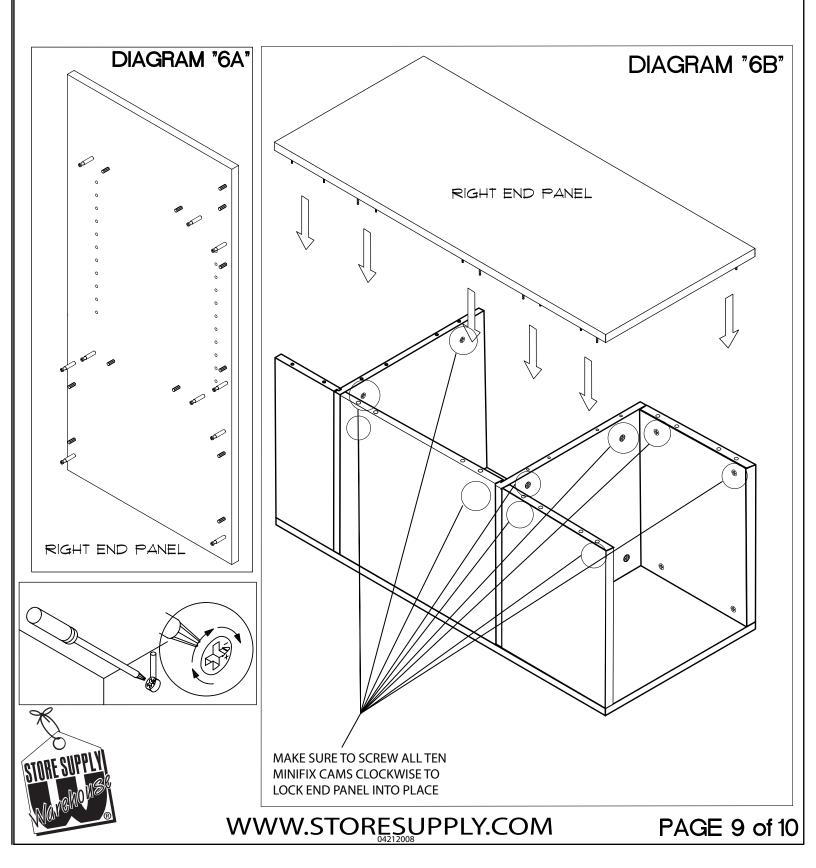

STEP 7:

TURN THE UNIT UPRIGHT AS INDICATED IN **DIAGRAM "7A"**. PLACE ONE SELF-STICKING COVER OVER EACH OF THE FOUR MINIFIX CAMS THAT ARE STILL VISIBLE FROM THE BACK OF THE UNIT AS IN **DIAGRAM "7B"**. PLACE THE FOUR CLEAR PLASTIC SHELF RESTS AT THE DESIRED HEIGHT AS INDICATED IN **DIAGRAM "7C"**. SLIDE THE WOODEN SHELF INTO PLACE AS IN **DIAGRAM "7D"** AND YOUR UNIT IS COMPLETE.

